

SIMPSON

Strong-Tie


SB Anchor Bolt Installation Guide

The SB anchor bolt offers an anchorage solution for our holdowns that call for a 5/8"-diameter, a 7/8"-diameter and a 1"-diameter anchor.

SB anchor bolts are code listed by ICC-ES under the 2012/2015/2018/2021 IBC and IRC.

Installation Steps


1

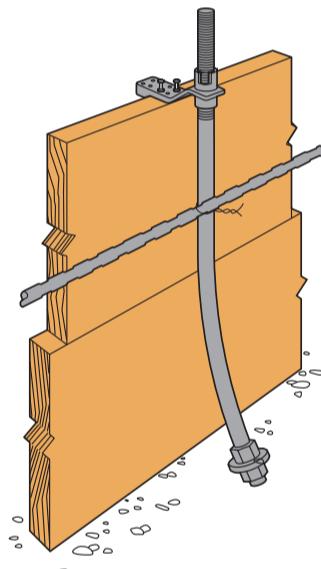


SB anchored using AnchorMate® at Embedment line (top of concrete)

SB anclado utilizando AnchorMate en la línea Embedment (parte superior del hormigón)

2

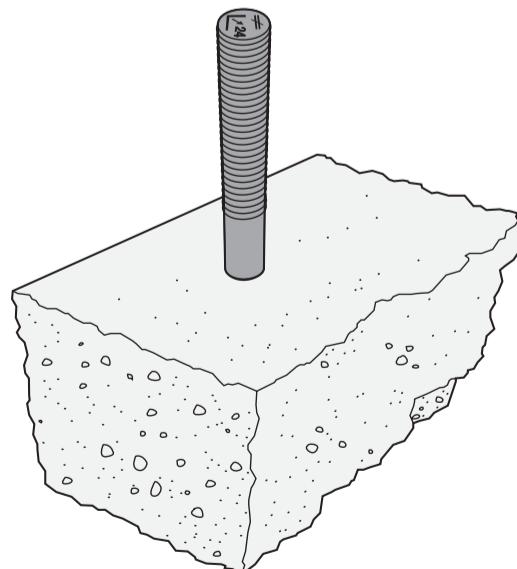

Alternative Options

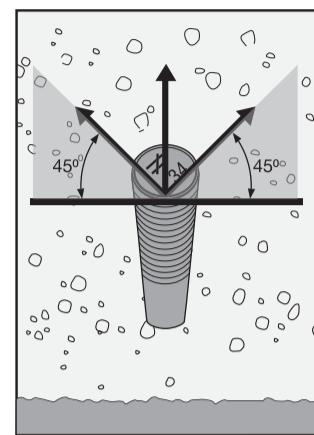

Install a minimum 45° from either edge.

Instalar a mínimo 45° de cada cara.